




Comtrend VR-3030 VDSL Modem

Set-up Instructions

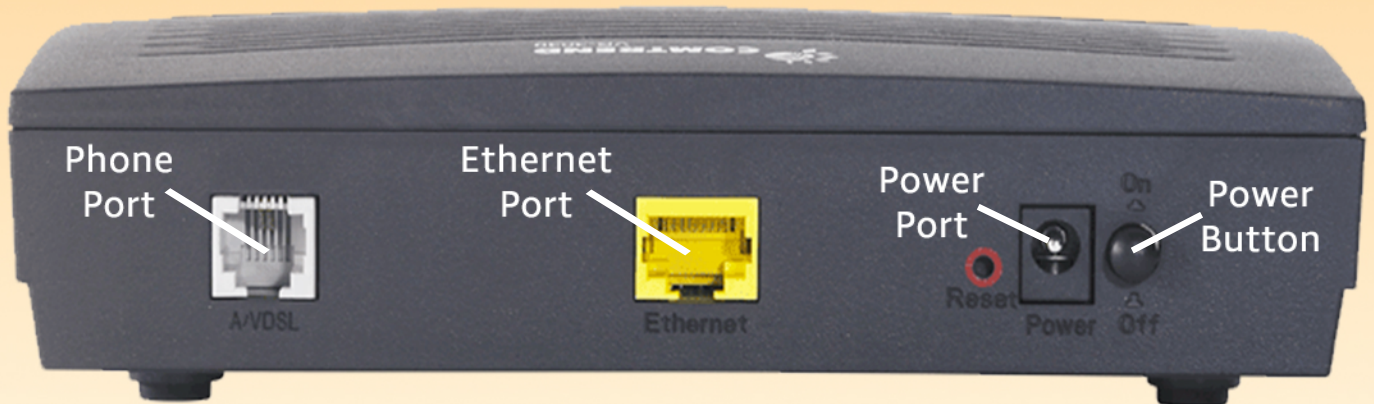

Step 1. Press the power button to the OFF position (OUT).

Step 2. Connect the power adapter (black cord) to the power port on the Comtrend. Attach the power adapter to a wall outlet or other AC source.

Step 3. Connect the phone line (grey) cable to the grey phone port and the other end to the phone jack.

Step 4. Connect the Ethernet cord (yellow) to the yellow Ethernet port on the Comtrend and the other end of the cord into the WAN port on a router. If you do not have a router, the cord plugs into a computer.

Step 5. Press the power button to the ON position (IN).

Step 6. Call Valley TeleCom at 520-384-9279 between the hours of 8AM -5PM Monday-Friday to have our staff activate the device.



800.421.5711 | vtc.net

